

Refuelling Procedure at the Dispenser and the Use of the Card Dispensing System

- 1) drive the airplane to the filling area
- 2) the filling holes of the tanks must be over the filling area / paved area
- 3) ground the aircraft with a grounding cable
- 4) place the dispensing card to the lower left window on the dispenser
- 5) enter your card's PIN (when using the card for the first time, enter a four-digit number of your choice, which will be your PIN)
- 6) enter the dispenser number for product dispensing – the number is located next to the nozzle on the dispenser

after entering a wrong dispenser number, the action will be interrupted; please repeat the process by placing the card to the lower left window on the dispenser and entering the PIN

- 7) remove the nozzle from the dispenser and start pumping the fuel
- 8) pull the nozzle back into the dispenser after you are finished pumping
- 9) place your dispenser card to the lower left window on the dispenser and stop the fuelling by confirming the print of a receipt

No. 1 Print receipt – yes

No. 2 Print receipt – no

- 10) idle run time of the dispenser pump is two minutes. After this time, stop fuelling with the card on the dispenser and repeat the procedure
- 11) fuelling end time with the card on the dispenser is ten minutes. After this time, the action ends automatically (without printing a receipt).
- 12) disconnect the grounding cable from the aircraft
- 13) remove the hose to the edge of the filling area

In the event of a fault, contact:

cards: +420724284425 or +420602317892

Vrchlabí airport: +420603528718

Benešov airport: +420603594623

Hradec Králové airport: +420731658193

Mladá Boleslav airport: +420606608530

Moravská Třebová airport: +420461311328

Příbram airport: +420602508248

Ostrava Mošnov airport: +420597471122

Olomouc airport: +420585414078

Vodochody airport: +420731135187