

Refuelling Procedure at the Dispenser and the Use of the Card Dispensing System

- 1) drive the airplane to the filling area
 - 2) the filling holes of the tanks must be over the filling area / paved area
 - 3) ground the aircraft with a grounding cable
 - 4) place the dispensing card to the lower left window on the dispenser
 - 5) enter your card's PIN (when using the card for the first time, enter a four-digit number of your choice, which will be your PIN)
 - 6) enter the dispenser number for product dispensing – the number is located next to the nozzle on the dispenser

after entering a wrong dispenser number, the action will be interrupted; please repeat the process by placing the card to the lower left window on the dispenser and entering the PIN
 - 7) remove the nozzle from the dispenser and start pumping the fuel
 - 8) pull the nozzle back into the dispenser after you are finished pumping
 - 9) place your dispenser card to the lower left window on the dispenser and stop the fuelling by confirming the print of a receipt

No. 1 Print receipt – yes
No. 2 Print receipt – no
 - 10) idle run time of the dispenser pump is two minutes. After this time, stop fuelling with the card on the dispenser and repeat the procedure
 - 11) fuelling end time with the card on the dispenser is ten minutes. After this time, the action ends automatically (without printing a receipt).
 - 12) disconnect the grounding cable from the aircraft
 - 13) remove the hose to the edge of the filling area
-

In the event of a fault, contact:

cards: +420724284425 or +420602317892

Vrchlabí airport: +420603528718
Benešov airport: +420603594623
Hradec Králové airport: +420731658193
Mladá Boleslav airport: +420606608530
Moravská Třebová airport: +420461311328
Příbram airport: +420602508248
Ostrava Mošnov airport: +420597471122
Olomouc airport: +420585414078
Vodochody airport: +420731135187
Plzeň Líně airport: +420733121167
Karlovy Vary airport +420731195004